





## TYPICAL RELAXATION CURVES AT HIGH TEMPERATURES – TECHNICAL DATA

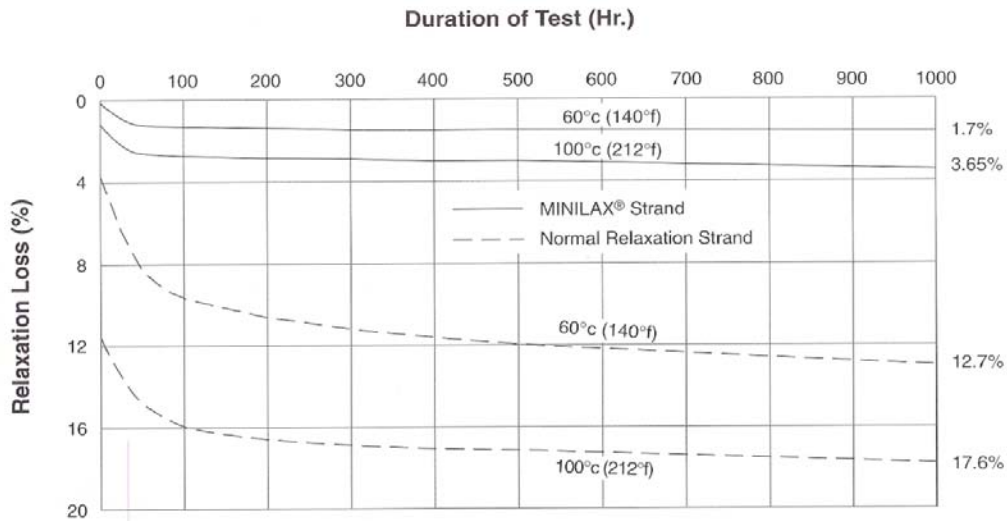

NOTE: Initial load is 70% of specified minimum breaking strength.

### One Example of Estimated Long-Term Relaxation By Larson-Miller Method

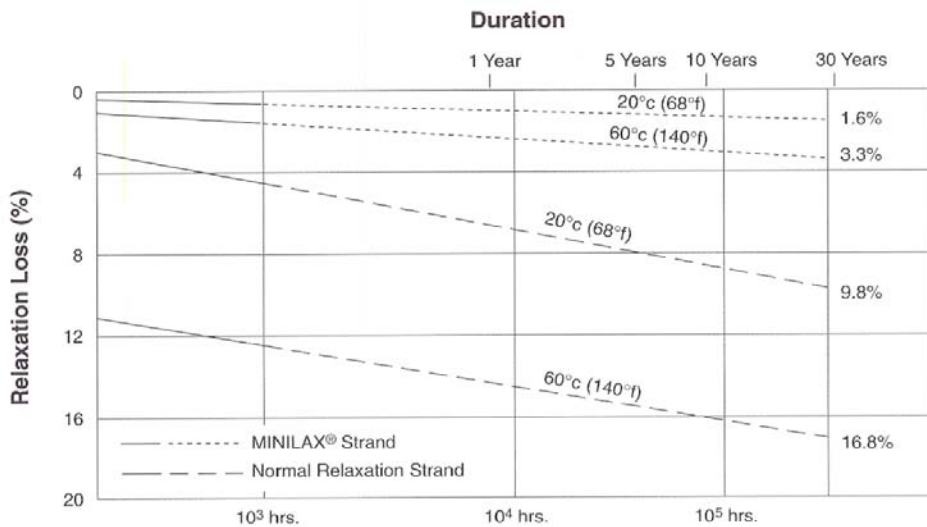

NOTE: Initial load is 70% of specified minimum breaking strength.